RIOTronics
6841 S YOSEMITE, ENGLEWOOD, CO 80112

PULSE ADAPTER KIT

RotaRead *model:* **RMLL-CU** 5.0 cf/pulse on 8C through 11M units, 50 cf/pulse on 16M through 56M units.

NOTE: DUAL CONTACTS ARE AVAILABLE.

1 REMOVE FOUR SCREWS: CAREFULLY remove entire unit from gas meter.

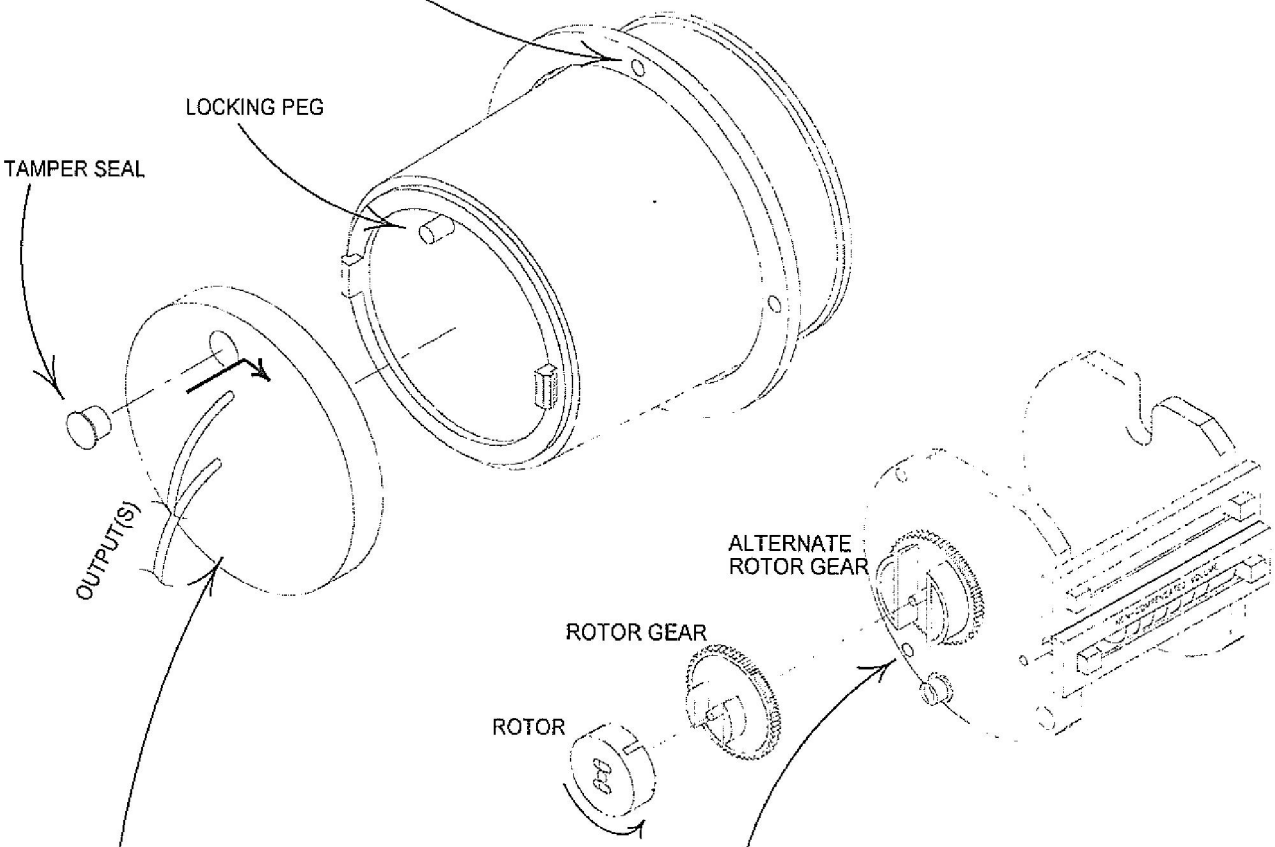

2 REMOVE ONE COVER SCREW: Screw is located on the inside plate of unit, accessible through a large hole in outside plate. Slide cover from unit.

3 INSTALL ROTOR: Align rotor with tabs on gear as shown. Push rotor onto gear tabs, then turn rotor counter-clockwise until tight. GEARS ARE PLASTIC, DO NOT OVER-TIGHTEN.

ALTERNATE GEAR.... Align rotor slots with gear and push on until rotor bottoms. IMPORTANT! Support gear with fingertips while pushing on rotor to avoid dislodging shaft bushing.

4 RE-ASSEMBLE COVER TO UNIT and re-install unit onto gas meter.

5 INSTALL SWITCH PLATE: Align switch plate so that locking peg fits into slot in back. Push switch plate onto cover and rotate clockwise until peg is centered in tamper seal hole. Push tamper seal firmly into locking hole until tamper seal flange enters hole.

Copyright 2005.